



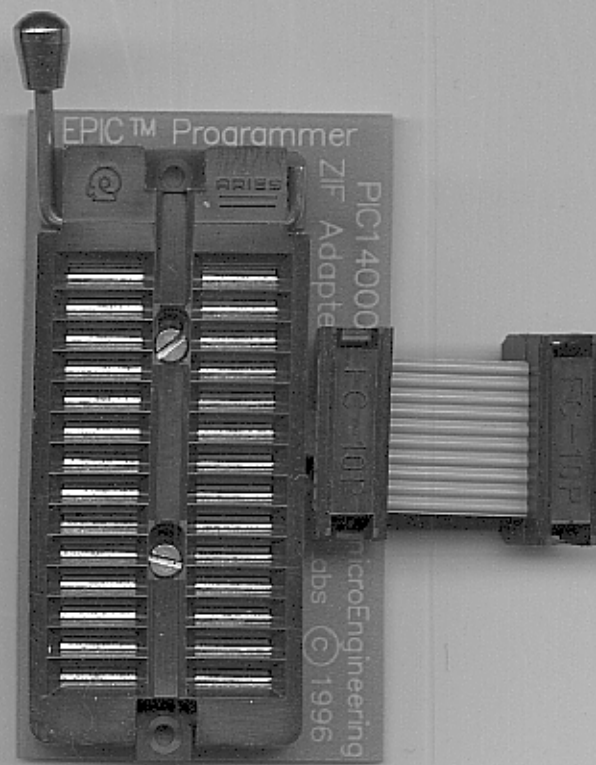

EPIC PIC14000 ZIF Adapter

Copyright ©1997 microEngineering Labs, Inc.

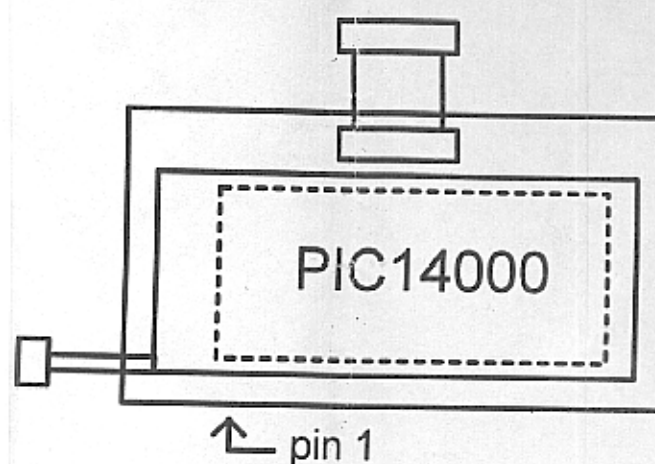

USE:

Plug the PIC14000 ZIF Adapter into the 10 pin header near the bottom of the EPIC Programmer. Make sure the EPIC Programmer is powered up and the EPIC software is running before inserting a PIC14000 into the ZIF adapter.

To insert a PIC into the adapter, lift the lever on the socket. Position the 28-pin PIC with pin one all the way toward the lever end of the socket and push down the lever to lock the PIC in place.

14000Z

microEngineering Labs, Inc.

EPIC PIC14000 ZIF Adapter